



Portable Propane Heater

STARTUP INSTRUCTIONS:

1. Ensure fuel selector valve on the heater is in the proper position. (Propane or Natural Gas)

WARNING- Operating this heater with the selector valve in the wrong position can result in personal injury or damage to the heater

2. For LP - Connect the POL inlet on the regulator of the heater to the propane cylinder.

3. Connect power supply and remote thermostat to heater

4. Turn on fuel supply. Verify proper position of fuel selector valve

5. Depress the fan switch to the "ON" position. The fan motor will start and air will be pushed through the outlet of the heater.

6. Depress the burner switch to the "ON" position. The burner should ignite and hot air will be pushed through the outlet of the heater.

TO SHUT DOWN:

1. Close fuel supply.

2. Move "BURNER" switches to the "OFF" position.

3. Wait 2-3 minutes and move the "FAN" switch to the "OFF" position.

4. Disconnect from fuel supply.